

INGCO

Pressure Sprayer


EN Pressure Sprayer



HSP3051









 [ingcoglobal](#)
 [INGCO GLOBAL](#)



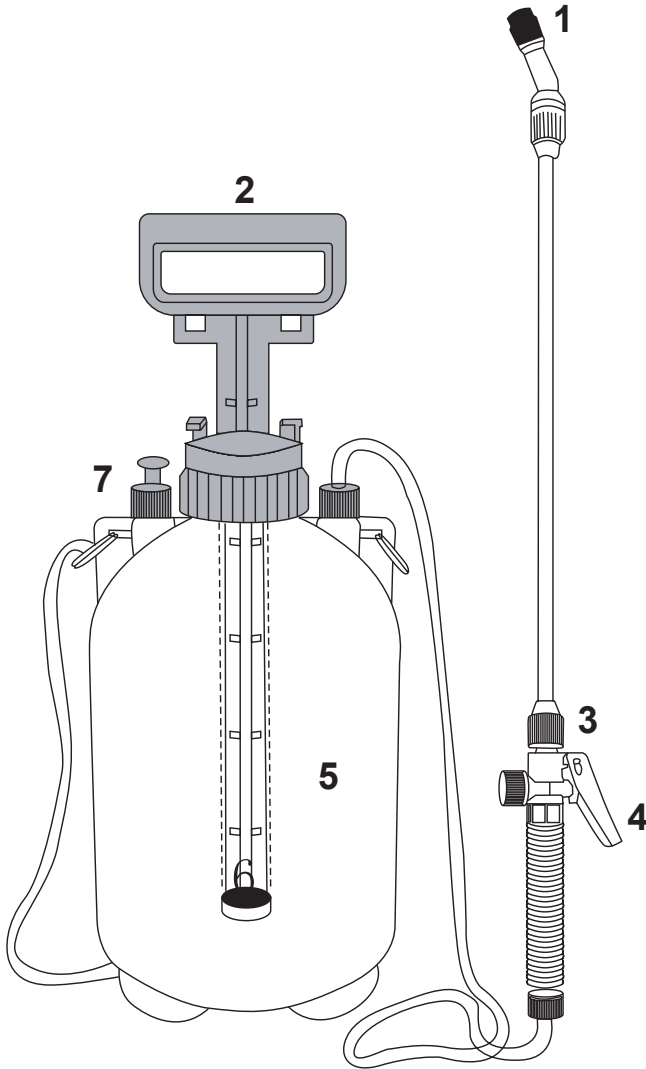

1 Adjustable Spray Nozzle
2 Pump Handle
3 Nozzle Connector
4 Trigger

5 Spray Bottle
6 Pump
7 Safety Valve

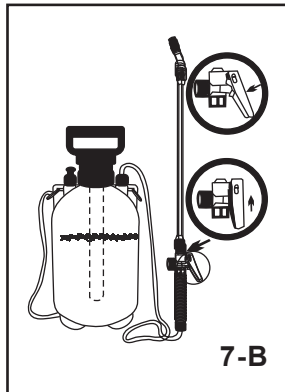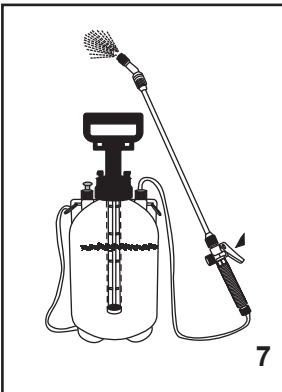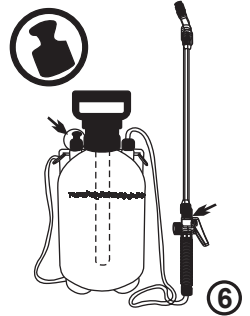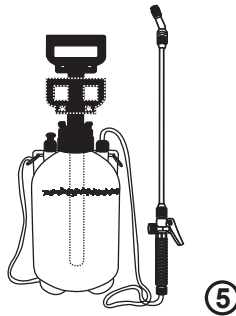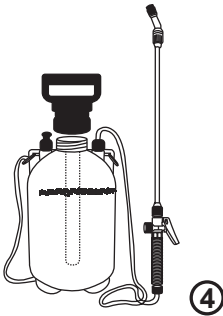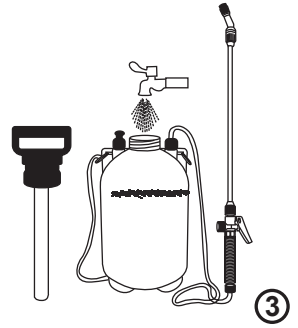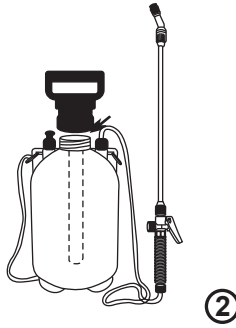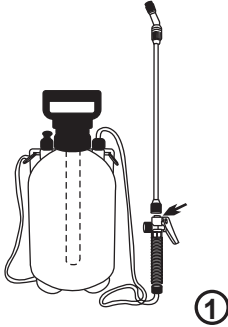

1. Attach the nozzle by screwing it on in a clockwise direction (Fig1)
2. Unscrew the pump handle in an anti-clockwise direction (Fig2)
3. Fill with the desired liquid to the max Fill line as shown on bottle (Fig3)
4. Screw the pump handle back down in a clockwise direction (Fig4)
5. Pump the sprayer about 10-20 times (Fig5)
6. The safety valve will leak if the air pressure is too high. Do not overfill with air or liquid (Fig6)
7. The sprayer will work when the trigger on the nozzle handle is depressed. To spray continuously, slide the trigger forward into lock position after depressing, to unlock, slide the trigger back (Fig7 & Fig7-B)

INGCO



INGCO TOOLS CO.,LIMITED

www.ingco.com

MADE IN CHINA

0120.V01

HSP3051